

Выбор инструментальных блоков CBI для станков Mori Seiki моделей MS 40A, MS 60A, MS 75A и MS 110A

CBI	Интерфейс револьверной головки MS40A				
	Модель станка				
Код заказа	DuraTurn 2050, 2550 MC	NL 1500, 2000 (20 stn.)	NT 1000, NTX 1000, 2000	NT 3100, 3150, 3200	NZ, NZX 1500, 2000
C4-TR/LE-MS40A	x	x	x	x	x
C4-TR/LE-MS40A-DT		x	x	x	x
C4-TR/LE-MS40A-YT		x			x
C4-TR/LI-MS40A	x	x	x	x	x
C4-TR/LI-MS40A-DT		x		x	x
C4-TR/LI-MS40A-SS			x		
C4-TR/LI-MS40A-YT		x			x
C3-DNE-MS40A-I	x	x	x	x	x
C4-DNE-MS40A-E	x	x	x	x	x
C4-DNI-MS40A-E	x	x	x	x	x
C4-DNI-MS40A-I	x	x	x	x	x
APB-TNE-MS40A-25	x	x	x	x	x

CBI	Интерфейс револьверной головки MS60A			
	Модель станка			
Код заказа	NL, NLX 1500-3000 (10/12 stn.) (MC/ Y/ SMC/ CY)	NT 4200, 4250 (12 stn.)	NT 4300, 5400 (10 stn.)	NZL 2500
C4-TR/LE-MS60A	x	x	x	x
C5-TR/LE-MS60A	x	x	x	x
C4-TR/LE-MS60A-DT	x	x	x	
C5-TR/LE-MS60A-DT	x	x	x	
C4-TR/LE-MS60A-YT	x			x
C4-TR/LI-MS60A	x			x
C5-TR/LI-MS60A	x			x
C5-TR/LI-MS60A-DT	x			
C4-TR/LI-MS60A-SS	x			x
C5-TR/LI-MS60A-SS	x			x
C4-TR/LI-MS60A-XT	x			x
C4-DNE-MS60A-E	x	x	x	x
C4-DNE-MS60A-I	x	x	x	x
C5-DNE-MS60A-E	x	x	x	x
C4-DNI-MS60A-E	x	x	x	x
C4-DNI-MS60A-I	x	x	x	x
C5-DNI-MS60A-E	x	x	x	x
C5-DNI-MS60A-I	x	x	x	x
APB-TNE-MS60A-25	x	x	x	x

CBI	Интерфейс револьверной головки MS75A			
	Модель станка			
Код заказа	NZX 4000			
C6-TR/LE-MS75A	x			
C6-TR/LI-MS75A	x			
C5-DNE-MS75A-E	x			
C5-DNE-MS75A-I	x			
C5-DNI-MS75A-E	x			

CBI	Интерфейс револьверной головки MS110A			
	Модель станка			
Код заказа	NZX 6000			
C6-TR/LE-MS110A	x			
C6-TR/LI-MS110A	x			
C6-DNE-MS110A-E	x			
C6-DNE-MS110A-I	x			
C6-DNI-MS110A-E	x			
C6-DNI-MS110A-I	x			